



YOU-RISTA (+MILK MASTER)



Safety warnings

SAFETY WARNINGS

Read the safety warnings carefully and only use the machine as described in these instructions in order to avoid accidental injury or damage. Keep these instructions for future reference. If you pass the machine on to another person, remember to give them these instructions.

Intended use and location

The machine has been devised for the following uses:

- Brewing coffee and espresso with Qbo-brand capsules.
- Preparing coffee and milk specialties (the latter of which is only possible with the additional MILK MASTER).

The machine has been designed for use in households or for similar applications such as

- in the staff kitchens of shops, offices or similar areas of work,
- in agricultural buildings,
- by customers in hotels, motels, bed and breakfast establishments or other places offering accommodation.

If the machine is used for commercial purposes, it must be supervised and cleaned by trained personnel. Further maintenance of the machine exceeding the cleaning process is not required.

Do not use the machine outdoors. Set up the machine in a dry, indoor room. Avoid areas with high humidity or a lot of dust.

DANGER to children and people with a restricted capability of operating appliances

- Children must not be allowed to play with the machine. Keep the machine and mains cord away from children under the age of 8.

- This machine can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities, or who lack experience and/or knowledge, provided they are supervised or have been trained in the safe use of the machine and understand the potential dangers.
- Children must not be allowed to clean the machine unless they are over 8 years of age and supervised while doing so. This machine is maintenance-free.
- Set up the machine in a place that is inaccessible to children.
- Keep the packaging material out of the reach of children. There is a risk of suffocation!

DANGER due to electricity

- Never immerse the machine, mains plug or mains cord in water, as there is otherwise a danger of electric shock. Do not clean the machine with a water jet and do not set it up in a place where it could potentially be cleaned with a water jet. Never touch the mains plug with wet hands.
- Never leave the machine unattended when it is switched on.
- Only connect the machine to a properly-installed, earthed wall socket. Its mains voltage should comply with the technical specifications of the machine.
- The mains cord must not be kinked or squeezed. Keep it away from sharp edges and sources of heat.
- Do not use the machine if the machine, mains cord or mains plug is damaged or if the machine has been dropped.

- Never place any drinks or other objects on top of the machine.
- Remove the mains plug from the wall socket...
 - ... if a fault occurs during use,
 - ... if you are not going to use the machine for a long period of time,
 - ... before removing components from the machine for cleaning and before wiping down the outer casing of the machine.

To unplug, always pull on the mains plug, not the cord.
- Do not make any modifications to the machine, mains cord or any other parts. Electrical appliances must only be repaired by qualified electricians, as improper repairs can cause considerable damage. Only have repairs carried out by a specialist workshop, or contact or the Qbo customer care service.

WARNING – risk of scalds/burns

- Do not touch the coffee spout during or immediately after use. Avoid contact with the coffee as it is dispensed.
- Do not open the lever during use and do not pull the capsule container out of the machine.

CAUTION – risk of injuries or material damage

- Use only original Qbo capsules. Neither use capsules from other manufacturers, nor damaged or misshapen capsules, and never fill capsules or the machine with ground coffee or instant coffee, as this would damage the machine. In these cases, any necessary repairs would not be covered by the warranty.
- Only use the machine with the capsule container and drip grid inserted.

- Fill the water tank only with fresh, cold tap water or drinking water. Do not use carbonated mineral water or any other liquids!
- Descale your machine as soon as a notification to do so is displayed.
- Do not pick up the machine by the lever. To move the machine, hold it by the sides of the outer casing.
- Place the machine on a solid, level surface that is well-illuminated and resistant to water and heat.
- To ensure the casing does not melt, do not place the machine on a hob, immediately next to a hot oven, radiator or anything similar.
- Route the mains cord in such a way that it cannot be tripped over. Do not let the mains cord hang down from the surface the machine is put on so that the machine cannot be pulled down by it.
- The machine is equipped with non-slip feet. Work surfaces often have varnished or plastic finishes and are treated with a variety of care products. Some of these may contain substances that react adversely to the non-slip feet and soften them. If necessary, place a non-slip mat under the machine.
- The machine must not be exposed to temperatures below 4°C. Residual water in the heating system could freeze and cause damage.
- Sound pressure level <70dB(A).